



Part no. 66849

Pneumatic Valve

Spring Compressor

Builds 350 lbs. of force with 125 psi, and will operate on a minimum of 100 psi. The compressor arm slides for adjustment, employing a locking pin for rapid, easy installation. Works on most cylinder heads.

1. Always wear safety glasses.
2. Always use a magnetic tool to install and remove valve spring keepers. Do not use your fingers.
3. **Break keepers loose from retainer by placing a socket over the retainer and hitting it with a rubber mallet.**
4. Do not exceed 130 psi of incoming air pressure.

For addition tech support related to this genuine PROFORM product, please call (586)774-2500, Monday-Friday, 9 a.m.-5 p.m. EST, or send an email to tech@ProformParts.com © 2024 Specialty Auto Parts U.S.A., Inc. All Rights Reserved.